


# Electronic Time Recorder

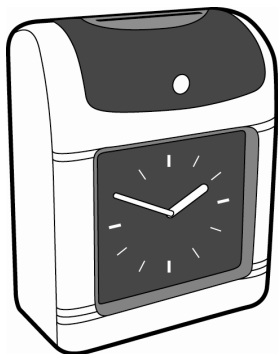

**Instruction Manual**

## *CONTENTS*

1, Introduction.....	4
1.1, Package content .....	5
1.2, Parts identification.....	5
1.3 Setting select key.....	6
2, Function options.....	7
2.1, Quick codes' selection.....	7
2.2, Detail codes' selection.....	8
3, Be ready for setting.....	10
4, Function setting.....	10
4.1, Setting the Year.....	11
4.2, Setting the Month and Data.....	11
4.3, Setting the time system.....	11
4.4, Setting the Hour and Minute.....	11
4.5, Setting the day changing time.....	11
4.6, Setting the Monthly, Weekly, Bi-weekly pay period ending day.....	11
4.6a, Change the Monthly pay period end day.....	12
4.7, Setting the Weekly pay period ending day.....	12
4.8, Setting the Bi-Weekly pay period ending day.....	13
4.9, Setting the S/W solstice start (month and day).....	13
4.10, Setting the S/W solstice start (hour and minute).....	13
4.11, Setting the S/W solstice end (month and day).....	14
4.12, Setting the S/W solstice end (hour and minute).....	14
4.13, Set printing position (Up/Down).....	14
4.14, Set printing position (Left/Right).....	14
4.15, Detecting front/back of cards.....	15
4.16, Setting the regular time signal (0-99Seconds).....	15

4.17, Setting the shifting time.....	15
4.18, Setting the 2-color printing.....	16
5. All reset.....	16
6. Trouble shooting.....	17
7. Replacing ribbon cartridge.....	18
8. Cautions.....	18
9. Specifications.....	19
10. Error Code.....	19


## 1. Introduction

In order to operate your time recorder accurately and efficiently with a longer product life, please read this manual thoroughly.

Models Functions	LCD	Analogue
LCD Display	*	
Clock Face		*
Two color printing	*	*
Time Signal	*	*
Perpetual calendar	*	*
Back up battery	*	*
Auto In-Out adjustment	*	*
External Signal Unit	*	*
Data memory backup during power failure	*	*
Check time card's front or back automatically.if insert the wrong side,will quit by the machine.	*	*


## 1.1 Package Contents

Unpack the time recorder and check its contents to ensure that the time recorder unit and all accessories as shown below are included.

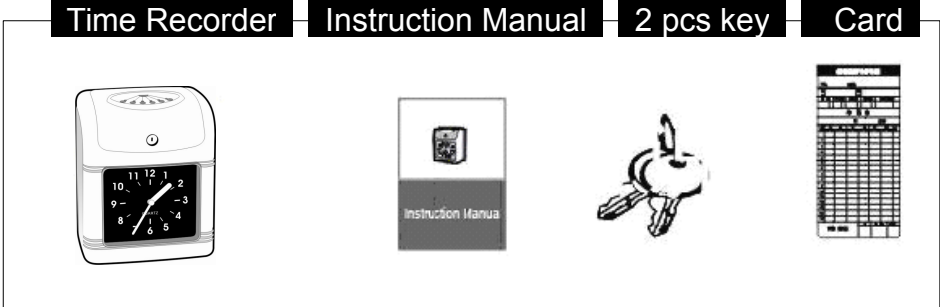


## 1.2 Parts identification


### (a) Keypad

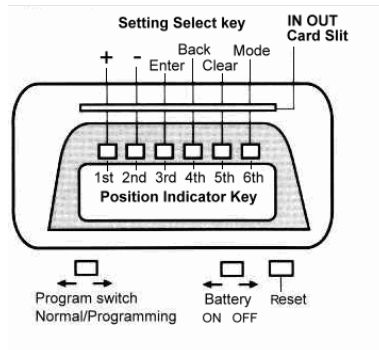

**Note: T-6500 does not have battery**

### (b) LCD on the top

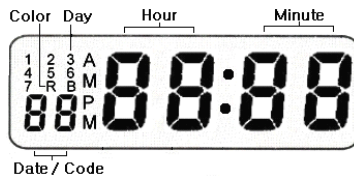

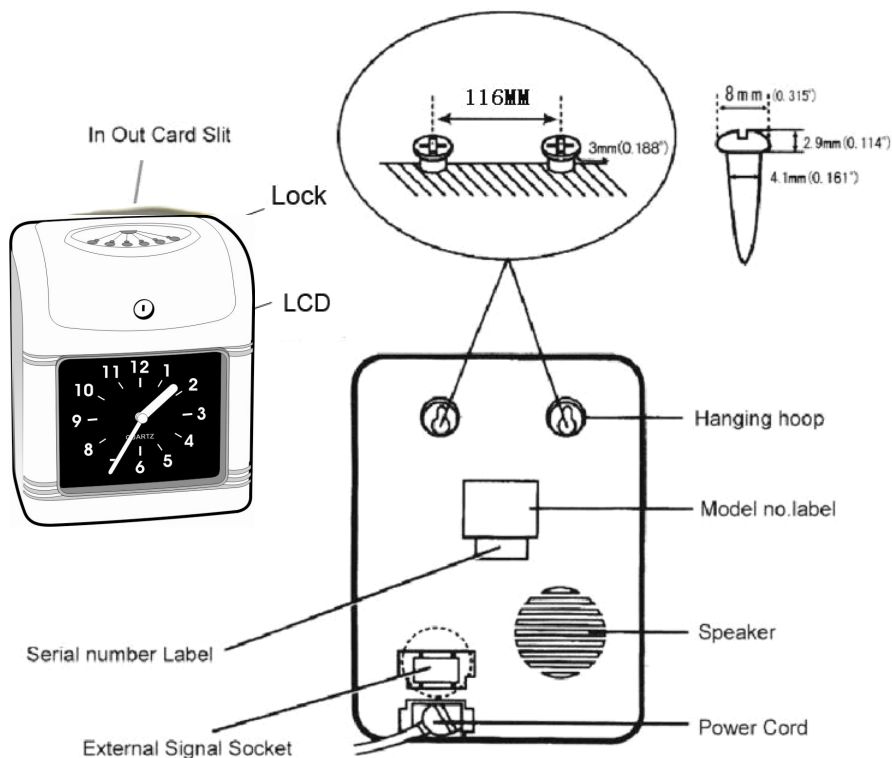

### 1.3 Setting select key

+	to increase the set value by 1
-	to decrease the set value by 1
Enter	to save the set value & enter the next step
Back	to backspace the set value
Clear	to cancel the set value
Program switch	Normal/ Programming
Battery	Battery On/Off
Reset	Reset

## 2. Function options

The function options will be started by unlocking and removing the lid from the time recorder with the program switch to right side. Here are total 73 pcs function codes, which are from “00, 01, 02...” to “73”, different code is for different setting. In the case, press “Enter” to select the codes forward or press “Back” to select backward for functions setting expected, or press “Program” to select function codes, then press “+” to increase the value as well as press “-” to decrease the value, and press “Enter” to select the codes forward, press “+” to increase the value as well as press “-” to decrease the value.

### 2.1 Quick codes' selection:

**00-01**---Setting the time (Year, Month, Date)

**02**-----Setting the time system

**03**-----Setting the time (Hour,Minute)

**04**-----Setting the day changing time

**05**-----Setting the Monthly, Weekly, Bi-weekly pay period ending day

**06**-----Setting the S/W solstice start (month and day)

**07**-----Setting the S/W solstice start (hour and minute)

**08**-----Setting the S/W solstice end (month and day)

**09**-----Setting the S/W solstice end (hour and minute)

**10**-----Printing position adjustment (up/down)

**11**-----Printing position adjustment (left/right)

**12**-----Detecting front/back of card

**13**-----Setting the regular time signal

**14-37**---Setting the time signal(01~24 times)

**38-55**---Setting the shifting time(01~18 times)

**56-73**---Setting the 2-color printing(01~18 times)

## 2.2 Detail codes' selection:

Code	Functions
00	Setting the Year
01	Setting the Month and Date
02	Setting the time system
03	Setting the Hour and Minute
04	Setting the day changing time
05	Setting the Monthly, Weekly, Bi-weekly pay period ending day
06	Setting the S/W solstice start (month and day)
07	Setting the S/W solstice start (hour and minute)
08	Setting the S/W solstice end (month and day)
09	Setting the S/W solstice end (hour and minute)
10	Printing position adjustment (up/down)
11	Printing position adjustment (left/right)
12	Detecting front/back of card
13	Setting the Duration of time signal(Seconds)
14	Setting the time of 1 <sup>st</sup> group of ringing
15	Setting the time of 2 <sup>nd</sup> group of ringing
16	Setting the time of 3 <sup>rd</sup> group of ringing
17	Setting the time of 4 <sup>th</sup> group of ringing
18	Setting the time of 5 <sup>th</sup> group of ringing
19	Setting the time of 6 <sup>th</sup> group of ringing
20	Setting the time of 7 <sup>th</sup> group of ringing
21	Setting the time of 8 <sup>th</sup> group of ringing
22	Setting the time of 9 <sup>th</sup> group of ringing
23	Setting the time of 10 <sup>th</sup> group of ringing
24	Setting the time of 11 <sup>th</sup> group of ringing
25	Setting the time of 12 <sup>th</sup> group of ringing
26	Setting the time of 13 <sup>th</sup> group of ringing
27	Setting the time of 14 <sup>th</sup> group of ringing
28	Setting the time of 15 <sup>th</sup> group of ringing
29	Setting the time of 16 <sup>th</sup> group of ringing



<b>30</b>	Setting the time of 17 <sup>th</sup> group of ringing
<b>31</b>	Setting the time of 18 <sup>th</sup> group of ringing
<b>32</b>	Setting the time of 19 <sup>th</sup> group of ringing
<b>33</b>	Setting the time of 20 <sup>th</sup> group of ringing
<b>34</b>	Setting the time of 21 <sup>st</sup> group of ringing
<b>35</b>	Setting the time of 22 <sup>nd</sup> group of ringing
<b>36</b>	Setting the time of 23 <sup>rd</sup> group of ringing
<b>37</b>	Setting the time of 24 <sup>th</sup> group of ringing
<b>38</b>	Setting the time of shifting to 1 <sup>st</sup> column
<b>39</b>	Setting the time of shifting to 2 <sup>nd</sup> column
<b>40</b>	Setting the time of shifting to 3 <sup>rd</sup> column
<b>41</b>	Setting the time of shifting to 4 <sup>th</sup> column
<b>42</b>	Setting the time of shifting to 5 <sup>th</sup> column
<b>43</b>	Setting the time of shifting to 6 <sup>th</sup> column
<b>44</b>	Setting the time of shifting to 1 <sup>st</sup> column
<b>45</b>	Setting the time of shifting to 2 <sup>nd</sup> column
<b>46</b>	Setting the time of shifting to 3 <sup>rd</sup> column
<b>47</b>	Setting the time of shifting to 4 <sup>th</sup> column
<b>48</b>	Setting the time of shifting to 5 <sup>th</sup> column
<b>49</b>	Setting the time of shifting to 6 <sup>th</sup> column
<b>50</b>	Setting the time of shifting to 1 <sup>st</sup> column
<b>51</b>	Setting the time of shifting to 2 <sup>nd</sup> column
<b>52</b>	Setting the time of shifting to 3 <sup>rd</sup> column
<b>53</b>	Setting the time of shifting to 4 <sup>th</sup> column
<b>54</b>	Setting the time of shifting to 5 <sup>th</sup> column
<b>55</b>	Setting the time of shifting to 6 <sup>th</sup> column
<b>56</b>	Setting the time of 1 <sup>st</sup> group of changing color(Red)
<b>57</b>	Setting the time of 2 <sup>nd</sup> group of changing color(Black)
<b>58</b>	Setting the time of 3 <sup>rd</sup> group of changing color(Red)
<b>59</b>	Setting the time of 4 <sup>th</sup> group of changing color(Black)
<b>60</b>	Setting the time of 5 <sup>th</sup> group of changing color(Red)
<b>61</b>	Setting the time of 6 <sup>th</sup> group of changing color(Black)

<b>62</b>	Setting the time of 7 <sup>th</sup> group of changing color(Red)
<b>63</b>	Setting the time of 8 <sup>th</sup> group of changing color(Black)
<b>64</b>	Setting the time of 9 <sup>th</sup> group of changing color(Red)
<b>65</b>	Setting the time of 10 <sup>th</sup> group of changing color(Black)
<b>66</b>	Setting the time of 11 <sup>th</sup> group of changing color(Red)
<b>67</b>	Setting the time of 12 <sup>th</sup> group of changing color(Black)
<b>68</b>	Setting the time of 13 <sup>th</sup> group of changing color(Red)
<b>69</b>	Setting the time of 14 <sup>th</sup> group of changing color(Black)
<b>70</b>	Setting the time of 15 <sup>th</sup> group of changing color(Red)
<b>71</b>	Setting the time of 16 <sup>th</sup> group of changing color(Black)
<b>72</b>	Setting the time of 17 <sup>th</sup> group of changing color(Red)
<b>73</b>	Setting the time of 18 <sup>th</sup> group of changing color(Black)


### 3. Be ready for setting

#### 1. Power Supply

- (1) Stable power source are highly recommended.
- (2) Please check the correct voltage & power cord before uses.

#### 2. Top Cover

Remove the top cover prior to set program or change the ribbon case  
 Open the Top Cover by using the key provided and remove the top cover.

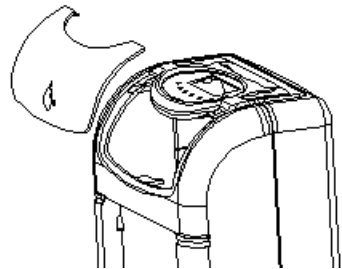

### 4. Function Setting

After removing the lid from the time recorder, turn the program switch to right side to enter setting condition. Press “Enter” to select the codes forward or press “Back” to select backward for functions setting expected and, or press “Program” to select function codes, then press “+” to increase the value as well as press “-” to decrease the value, and press “Enter” to select the codes forward, press “+” to increase the value or press “-” to decrease the value and, press “Enter” to save the set value and start the next setting.

## 4.1 Setting the Year

Turn the program switch to right side, the Codes will begin from “00”

(00 display on the left corner indicates the program Code),

The digital display reads 2006 indicates year 2006. The year

“06” flashes on the right of the digital display, press the **+**

or **□** button to set the year. Press **Enter** to register the setting.



## 4.2 Setting the Month and Data

Press **Enter** or **Back** to enter the program Code **01**,

or press “Program” to select function codes, then press

“+” to increase the value as well as press “-” to decrease

the value to enter the program Code **01**, and press “Enter” to select the codes

forward **(the next Codes(02-73) Perform the same operation)**

press **+** or **□** button to set the month. Press **Enter** again to

register the setting value.

press **+** or **□** button to set the data, Press **Enter** again to

register the setting value.



## 4.3 Setting the time system

Press **Enter** or **Back** to enter the program Code **02**,

press **+** or **□** button to set the time system. Press **Enter** again to register the

setting value.

## 4.4 Setting the Hour and Minute

Press **Enter** or **Back** to enter the program Code **03**,

Press **+** or **□** button to set the Hour. Press **Enter** again to

register the setting value.

Press **+** or **□** button to set the Minute. Press **Enter** again to

register the setting value.



## 4.5 Setting the day changing time

Press **Enter** or **Back** to enter the program Code **04**,

press **+** or **□** button to set the day changing time. Press

**Enter** again to register the setting value.

 


## 4.6 Setting the Monthly, Weekly, Bi-weekly pay period ending day

Press **Enter** or **Back** to enter the program Code **05**,

press **+** or **-** button to set the card type.  
 Press **Enter** again to register the setting value


Card Type	Functions
<b>00</b>	<b>Month pay time card</b>
<b>01</b>	<b>Weekly pay time card</b>
<b>02</b>	<b>Bi-weekly pay time card</b>



### 4.6a Change the Monthly pay period end day

When the pay period end day is set to 00, the first row on the 1~15 row card surface is automatically as blank row.


The set value is from 00 to 31.

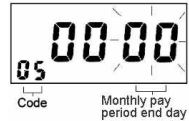

### 4.7 Setting the Weekly pay period ending day

Press **Enter** or **Back** to enter the program code 05,  
 press **+** or **-** button to set the card type to 01  
 Press **Enter** again to register the setting value.

 Press **Clear** button to select the required pay period ending day and then Press **Enter** again to register the setting value.



Weekly pay Card type	Functions	Bottom Space
<b>01</b>	<b>Upper part weekly pay</b>	<b>23mm</b>
<b>02</b>	<b>Lower part weekly pay</b>	<b>23mm</b>
<b>03</b>	<b>Upper part weekly pay</b>	<b>35mm</b>
<b>04</b>	<b>Lower part weekly pay</b>	<b>35mm</b>



press **+** or **-** button to set the weekly pay card type to 01  
 Press **Enter** again to register the setting value

## 4.8 Setting the Bi-Weekly pay period ending day

Press **Enter** or **Back** to enter the program code 05, press **+** or **-** button to set the card type to 02 press **Enter** again to register the setting value press **Clear** button to select the required pay period ending day and then Press **Enter** again to register the setting value.

 
Press **+** or **-** button to set the Bi-weekly pay card type to 01. Press **Enter** again to register the setting value



Bi-weekly pay Card type	Functions	Bottom Space
01	Bi-weekly pay current week	23mm
02	Bi-weekly pay second week	23mm
03	Bi-weekly pay current week	35mm
04	Bi-weekly pay second week	35mm


## 4.9 Setting the S/W solstice start (month and day)

Press **Enter** or **Back** to enter the program code 06, press **+** or **-** button to set the start month. Press **Enter** again to register the setting value. press **+** or **-** button to set the start date. Press **Enter** again to register the setting value.



## 4.10 Setting the S/W solstice start (hour and minute)

 Press **Enter** or **Back** to enter the program code 07, press **+** or **-** button to set the start hour.





Press **Enter** again to register the setting value.  
 press **+** or **Back** button to set the start minute.  
 Press **Enter** again to register the setting value.





### 4.11 Setting the S/W solstice end (month and day)

Press **Enter** or **Back** to enter the program code 08,  
 press **+** or **Back** button to set the end month.  
 Press **Enter** again to register the setting value.  
 press **+** or **Back** button to set the end date.  
 Press **Enter** again to register the setting value.

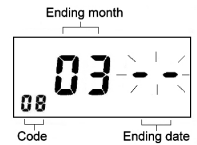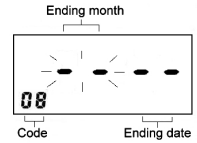


### 4.12 Setting the S/W solstice end (hour and minute)

Press **Enter** or **Back** to enter the program code 09,  
 press **+** or **Back** button to set the end hour.  
 Press **Enter** again to register the setting value.  
 press **+** or **Back** button to set the end minute.  
 Press **Enter** again to register the setting value.

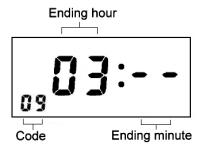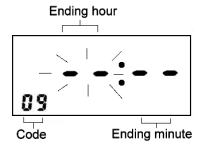


### 4.13 Set printing position (Up/Down)

 Press **Enter** or **Back** to enter the program code **10**,  
 press **+** or **Back** button to set the printing position <0~9>  
 Press **Enter** again to register the setting value.  
 Higher value, printing moves upward, lower value,  
 printing moves downward.



### 4.14 Set printing position (Left/Right)

 Press **Enter** or **Back** to enter the program code **11**,



press **[+]** or **[ ]** button to set the printing position <0~9>  
Press **[Enter]** again to register the setting value.

#### 4.15 Detecting front/back of cards

Press **[Enter]** or **[Back]** to enter the program code **12**.

Press **[+]** or **[ ]** button to select the flashing value “0000” or “0001”,

“0000” is for closing this function, “0001” is for starting this function.

Press **[Enter]** again to register the setting value.

**\*The detection function operates only when you use specific time cards (monthly pay cards) with front/back detection cut-out.**



#### 4.16 Setting the regular time signal (0~99Seconds)

Press **[Enter]** or **[Back]** to enter the program Code **13**,

Press **[+]** or **[ ]** button to set time signal duration and the initial value (10 seconds) will appear.

The duration can be set from 0~99 seconds,

Press **[Enter]** again to register the setting value and enter code **14** so as to setting the time of 1<sup>st</sup> ringing

Press **[+]** or **[ ]** button to set the Hour.

Press **[Enter]** again to register the setting value.

Press **[+]** or **[ ]** button to set the Minute.

Press **[Enter]** again to register the setting value.

Press **[+]** button to set the week.

Press **[ ]** button to cancel the week.

Press **[Clear]** button to set everyday,

Doing the same as above to enter code 15~37 and complete the setting of 2<sup>nd</sup>~24<sup>th</sup> ring times if necessary.



#### 4.17 Setting the shifting time

Press **[Enter]** or **[Back]** to enter the program Code **38**,

Press **[+]** or **[ ]** button to set the Hour.



Press **Enter** again to register the setting value.

Press **+** or **□** button to set the Minute.

Press **Enter** again to register the setting value.

Press **+** button to set the week.

Press **□** button to cancel the week.

Press **Clear** button to set everyday,

Doing the same as above to enter code 39~55 and complete the setting of 2<sup>nd</sup>~18<sup>th</sup> shifting times if necessary.

The format below is for reference:

	38	39	40	41	42	43
Print Column	44	45	46	47	48	49
	50	51	52	53	54	55
Function	A.M. IN	A.M. OUT	P.M. IN	P.M. OUT	O.T. IN	O.T. OUT

#### 4.18 Setting the 2-color printing

Press **Enter** or **Back** to enter the program Code **56**,

Press **+** or **□** button to set the Hour.

Press **Enter** again to register the setting value.

Press **+** or **□** button to set the Minute.

Press **Enter** again to register the setting value.

Press **+** button to set the week.

Press **□** button to cancel the week.

Press **Clear** button to set everyday,

Doing the same as above to enter code 57~73 and complete the setting of 2<sup>nd</sup>~18<sup>th</sup> change color times if necessary.



#### 5. All Reset

Press "Reset" key to re-start the whole machine.

Press **+** & **Clear** & **Mode** (Key **1, 5, 6**) all together to restore the default value. including Date, Time, Time Signal, Color Change, Printing Position.




## 6. Trouble Shooting

© Press **RESET** button to re-start the program when it is not properly work.


<b>Trouble</b>	<b>Causes</b>	<b>Corrective Measures</b>
The time recorder does not accept time card	<ol style="list-style-type: none"> <li>1. Power failure</li> <li>2. The time card is damaged</li> <li>3. The power cord is disconnected.</li> <li>4. Cards were inserted or pulled out by force.</li> </ol>	<ol style="list-style-type: none"> <li>1. Wait until power supply is restored</li> <li>2. Change a new time card</li> <li>3. Insert the power plug firmly into the power outlet.</li> <li>4. Pull the power plug out of the power outlet, then insert again.</li> </ol>
The clock is slow (or fast)	<ol style="list-style-type: none"> <li>1. Mistakes in setting the clock.</li> <li>2. Power failure</li> </ol>	Set it correctly.
Light printing	<ol style="list-style-type: none"> <li>1. The ribbon cartridge is not set correctly.</li> <li>2. The cartridge has been used for long time.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set it correctly.</li> <li>2. Change a new cartridge.</li> </ol>
The printing position is wrong	<ol style="list-style-type: none"> <li>1. Incorrect setting of day change.</li> <li>2. Improper use of the time recorder.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set it correctly.</li> <li>2. Make sure to insert the card in the card slot and remove it properly.</li> </ol>
The date is incorrect	Mistakes in setting the date	Set it correctly.
Imperfect printing	Improper use of the time recorder	Make sure to insert card in the middle of card slot and remove then properly.

## 7. Replacing Ribbon Cartridge

1. Open the top cover, press Column 4 to move the ribbon cartridge to center.
2. As shown in the figure below, pull the ribbon holders towards you and, holding them steady in the position, use the handle to take out the cartridge.

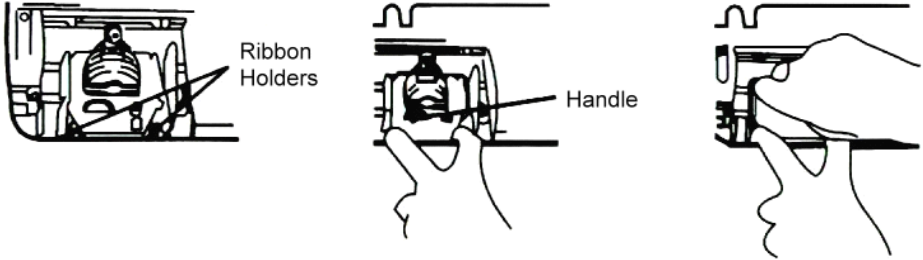

3. Correctly insert a new cartridge between the ribbon guide and the printer head.  
Push the cartridge head until it clicks into place. Turn the knob clockwise to fasten the ribbon.

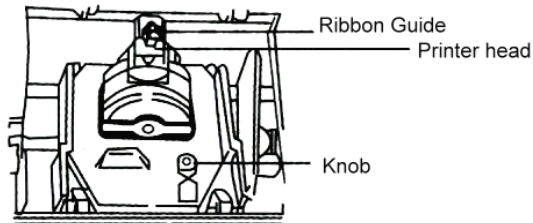

## 8. Cautions

1. To avoid fire or electric shock, please do not expose this machine to rain or excessive condensed moisture.
2. Do not expose to direct sunlight, strong heat source or dusty area.

## 9. Specifications

Power Supply	DC13V 1.5A Input (Refer to the indication on the label of each machine)
Power Consumption	Standby:2W / Work:10W
Dimensions	Approx. 193 x 244 x 123 mm ( L x W x H )
Weight	2.4 Kgs
Usage Environment	-30°C~40°C
	10%RH~80%RH
Time Card Sizes	85 x 188 x 0.35 mm ( W x L x H )
Ribbon Cartridge	RN-16(D)

## 10. Error Code

Once the E1E1, E2E2, shown on LCD display, please contact your dealer from whom you purchased the time recorder.

**E1E1--Wrong position of Up & Down**

**E2E2--Wrong position of left & right**

***It is recommended to use genuine manufacturer time recorder ribbons. Usage of non genuine or compatible ribbons may damage your printer and void your warranty.***